
CONNECTION DIAGRAMS FOR A HOT WATER PRIORITY SYSTEM FEATURING HS3D 3 PORT DIVERTER VALVE



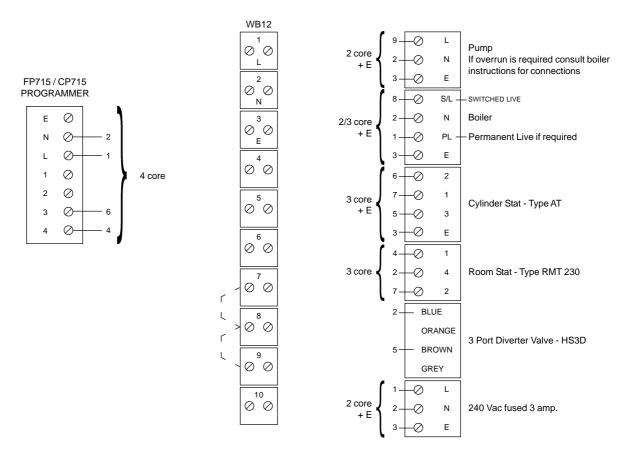

If a room thermostat is not being used then link terminals 4 and 7 on WB12. N.B. Set switch No. 2 on the back of the FP715/CP715 to the 'gravity' position.

Danfoss

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products alraedy on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

Danfoss Randall Ltd

Ampthill Road, Bedford, MK42 9ER Tel: 01234 364621 Fax: 01234 219705 email: danfossrandall@danfoss.com Website: www.danfoss-randall.co.uk

